


Multi-Functional Display

MASS-STREAM™ D-6400

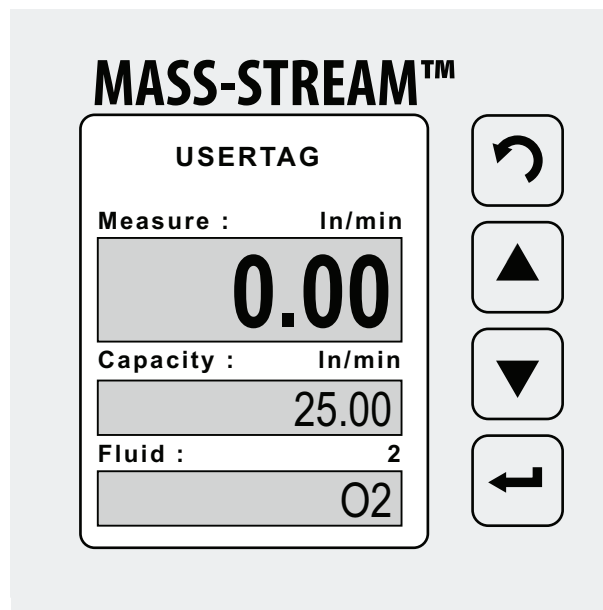

User Manual

English

9.17.164B • 2023-02

Table of Contents

1	Safety information	3
1.1	General safety information	3
1.2	Scope of this manual	3
1.3	Illustrations	3
2	Operation	3
2.1	Display overview	3
2.1.1	Navigation	3
2.2	Password protection	3
2.3	Restore factory settings	3
3	Menu overview.....	4
3.1	Main Menu	4
3.2	Security Menu	5

1 Safety information

1.1 General safety information

⚠ Please read this document and all other applicable documents carefully before installing and operating the product.

All instructions must be observed. Failure to comply with instructions may result in material damage and personal injury, including danger to life.

1.2 Scope of this manual

This manual covers the operation of the MASS-STREAM™ D-6400 using the integrated display (optional).

- ▶ Please read the Instruction Manual MASS-STREAM™ D-6400 before energizing and operating the instrument.

The latest version of the manual can be downloaded from the Bronkhorst® website.

- ▶ For the web address, see the back of this document.

1.3 Illustrations

The illustrations used in this manual are intended as general instructions for correct operation.

The illustrations may slightly differ from the actual situation due to certain product types or factory configurations.

2 Operation

i All custom settings persist after unplugging the main connector or after a power loss.

i When navigating through the menu, the digital communication via RS232 or fieldbus interface remains fully accessible.

2.1 Display overview

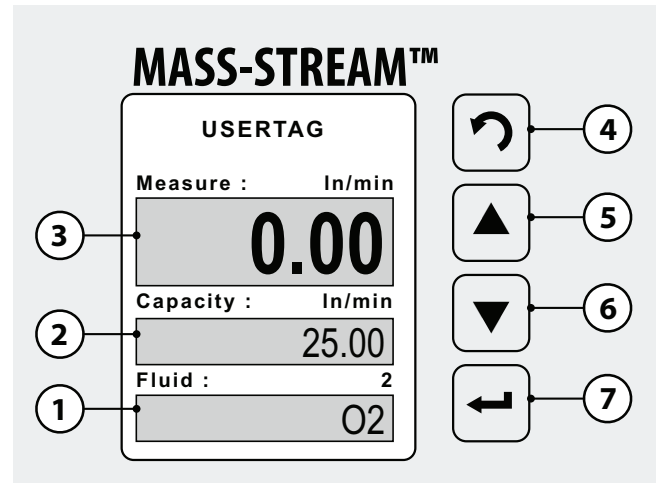


Fig. 1. Display - standard view

1. Info lower data field
2. Info middle data field
3. Info top data field
4. Back button
5. Up button
6. Down button
7. Enter button

2.1.1 Navigation

The buttons have the following functions:

Back Button ↶ [4]

- Return/ back
- Cycle through pre-settings in the lower data field

Up/Down button ⇅ [5 + 6]

- Navigating the menu items
- Selecting fields and characters

Enter button ↵ [7]

- Enter selected menu item
- Confirm selection/changes

2.2 Password protection

A password upon delivery protects the device from unauthorized operation and data entry via the local navigation buttons.

Factory default password is: 'abc' followed by 5 x ↵ (blanks).

- ▶ Press the ↵ button to activate the screen.

When prompted with the password dialog.

- ▶ Select the correct character using the ⇅ buttons.
- ▶ Press ↵ to confirm, and move to the next position.
- ▶ After entering the last character of the password: press ↵ to confirm.

The default password can be changed in Special Mode (» 3.2, page 5).


The password is up to 8 characters long, and only may contain the following characters:

- Small letters - a ... z
- Capital letters - A ... Z
- Numbers - 0 ... 9

2.3 Restore factory settings

The factory settings can be restored in the submenu Advanced (» Tab. 6, page 5).

3 Menu overview

 Access to the Main Menu (settings menu), and the submenu Advanced can be disabled in the Security Menu (» § 3.2, page 5).

Many functions can be set and selected in the display menu of the product.

A limited feature set is also available in Bronkhorst® FlowWare software (e.g. FlowDDE, FlowSuite).

3.1 Main Menu




In the Main Menu all basic functions can be set or activated in several submenu's:

- **Readout:** readout settings and fluid selection, » Tab. 1
- **Controller:** controller characteristics, » Tab. 2
- **Counter:** counter settings, » Tab. 3
- **Alarm:** alarm settings, » Tab. 4
- **Setup:** product info, display and bus settings, » Tab. 5
- **Advanced:** sensor settings, auto zero and restore factory settings, » Tab. 6

To enter the Main Menu from the standard view:

- ▶ Press the  button.

If prompted with the password dialog:

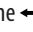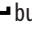- ▶ Enter the password to enter the Main Menu (» 2.2, page 3).
- ▶ Use the  buttons and the  button to navigate and change the settings.
- ▶ To return to the standard view: press the  button several times.

Readout menu		Display	FlowWare
Readout			
- Actual		▪	
- Percentage			
fluid selection			
fluid			
- Gas 1		▪	▪
- Gas ...			
- Gas 8			
capacity kg/s		Read Only	▪
- User defined number		Read Only	▪

Tab. 1. Menu - Readout menu

Controller menu		Display	FlowWare
speed x			
- User defined number		▪	▪
slope sec			
- User defined number		▪	▪
mode			
- analog input		▪	▪
- bus/rs232			
- rs232			
- fb ana slave			
- analog slave			
- fb slave			
- valve open			
- valve closed			
- control idle			
- setpoint 100%			
- setpoint 0%			
pid controller			
pid-Kp x			
- User defined number		▪	▪
pid-Ti sec			

Controller menu		Display	FlowWare
- User defined number		▪	▪
pid-Td sec			
- User defined number		▪	▪
response			
open from zero			
- User defined number		▪	▪
normal step			
- User defined number		▪	▪
stable situation			
- User defined number		▪	▪

Tab. 2. Main - controller menu

Counter menu		Display	FlowWare
Mode			
- up		▪	▪
- off			
- up to limit			
Reset			
- automatic		▪	▪
- manual			
Unit			
- ln	- uls	▪	▪
- m3s	- m3n		
- dm3s	- dm3n		
- ls	- uln		
- cm3s	- cm3n		
- mls	- mln		
- mm3s	- mm3n		
Limit			
- User defined number		▪	▪
Setpoint step			
- no		▪	▪
- yes			
Setpoint %			
- User defined number		▪	▪

Tab. 3. Main - counter menu

Alarm menu		Display	FlowWare
Mode			
- off		▪	▪
- power-up			
- response			
- min/max			
Reset			
- automatic		▪	▪
- manual			
Min Alarm %			
- User defined number		▪	▪
Max Alarm %			
- User defined number		▪	▪
Delay sec			
- User defined number		▪	▪
Setpoint step			
- no		▪	▪
- yes			

Alarm menu	Display	FlowWare
Setpoint %		
- User defined number	▪	▪

Tab. 4. Main - alarm menu

Setup menu	Display	FlowWare
Info		
Usertag		
- User defined data	▪	▪
Serial		Read Only
Model		Read Only
Firmw instr		Read Only
Customize		
Info top	▪	
- usertag	▪	
- serial		
Info middle	▪	
- capacity	▪	
- counter		
- valve		
- setpoint		
Setpoint	▪	
- step	▪	
- cursor		
Readout digits		
- 1 ... 5		
Display		
Brightness	▪	
- 0 ... 9	▪	
Screensaver	▪	
- on	▪	
- off		
Delay min	▪	
- 01 ... 99	▪	
Bus		
- Bus		Read Only
Bus type, if applicable		Read Only
- Node address	▪	▪
- User defined number	▪	▪

Tab. 5. Main - setup menu

Advanced menu	Display	FlowWare
Sensor		
dyn filter		
- User defined number	▪	▪
stat filter		
- User defined number	▪	▪
Autozero		
- cancel	▪	▪
- start auto zero		
Restore		
- cancel	▪	▪
- start restore		

Tab. 6. Main - advanced menu

3.2 Security Menu

In the Security Menu the password can be changed, and several menu items from the Main Menu can be hidden or password protected. For these items, one of the following access modes can be set:

- **password:** menu item is password protected
- **disabled:** menu item is hidden.
- **enabled:** menu item is available (no password prompt).

To enter the Security Menu from the standard view:

- ▶ Press \blacktriangle buttons simultaneously until prompted with the password dialog.
- ▶ Enter the password to enter the Security Menu (» 2.2, page 3).
- ▶ Use the \blacktriangle buttons and the \blacktriangleleft button to navigate and change the settings.
- ▶ To return to the standard view: press the \curvearrowright button several times.

Security menu	Display	FlowWare
Edit setpoint		
- password	▪	
- disable		
- enable		
Reset counter		
- password	▪	
- disable		
- enable		
Reset alarm		
- password	▪	
- disable		
- enable		
Settings menu		
- password	▪	
- disable		
- enable		
Advanced		
- password	▪	
- disable		
- enable		
New password		
- User defined	▪	
- Confirm	▪	

Tab. 7. Security menu







Service



Helpdesk



Downloads



Bronkhorst Instruments GmbH
Am Ziegelwerk 1
D-85391 Leonhardsbuch, Germany

+49 (0) 8166 9921 0
info.bhi@bronkhorst.com
www.bronkhorst.com

